

POWERFLEX®

PART NUMBER
PFR2-114

DESCRIPTION
REAR UPPER WISHBONE BUSH

INSTALLATION GUIDE

Contents (parts per pack):

8 x Polyurethane Bushes 2 x PTFE/Silicone Grease
6 x Nylon Washers 2 x 52.5mm Stainless Steel Sleeves
2 x 55mm Stainless Steel Sleeves 2 x Stainless Steel Washers

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove rear upper wishbone from vehicle.
2. Carefully remove OEM bushes from wishbone.
3. Clean bore of wishbone and remove any burrs or sharp edges.
4. Push the Polyurethane bushes into place in the wishbone bores. (Figure 1)
5. Apply the supplied grease liberally into the knurled bore and outside faces of the bushes and the outside of the sleeves.
6. Push the 52.5mm long sleeve into the front bush and the 55mm long sleeve into the rear bush (Figure 1)
7. Using a small amount of grease, attach the steel washer to the inside face of the front bush as in Figure 1.
8. Using a small amount of grease, attach the nylon washers around the metal sleeves to the other locations shown in Figure 1.
9. Refit the arm to the car, ensuring to tighten all hardware to manufacturers recommended torque settings.

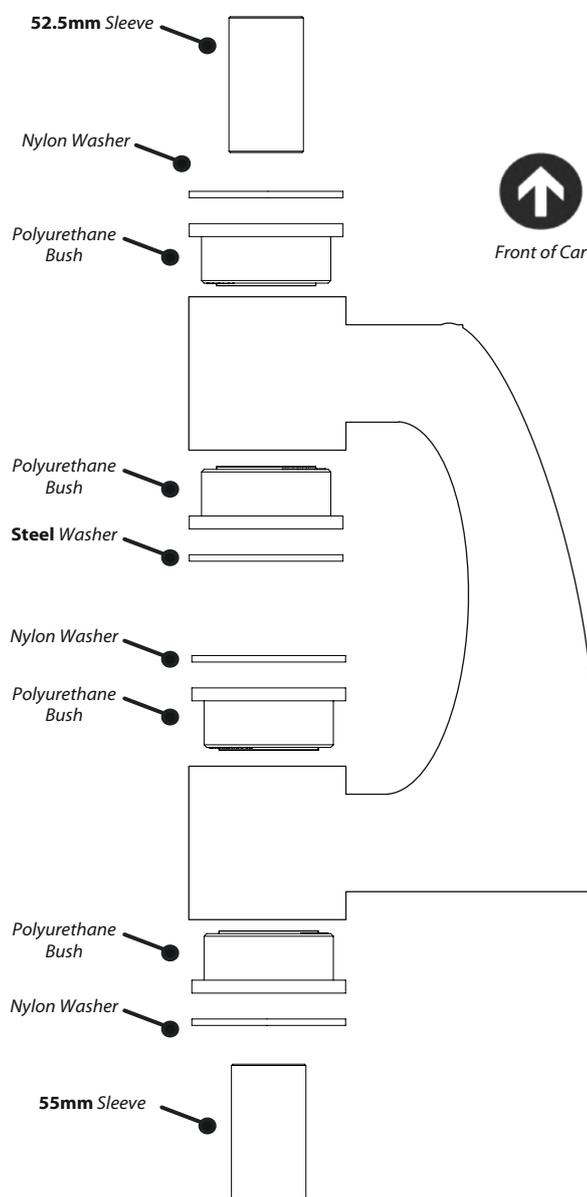


Figure 1